

Hydraulic Automatic Cylinder Filling System 7194MD and 7194HD

Application

Designed to provide accurate, economical filling of LP-Gas, DOT and fork lift cylinders by weight. Filling stops automatically as the total weight of the cylinder reaches the amount pre-set on the scale. One individual can efficiently handle up to four cylinder filling operations simultaneously to maximize profits, increase efficiency and allow servicing of more customers.

The RegO automatic cylinder filling system is designed for use with these scales only:

FAIRBANKS-MORSE SCALES

New Style - 1280A Double Beam Scale or Single Beam Scales 1124A and 1174A.

Old Style - 1280 Double Beam Scale or Single Beam Scale 1123 with or without Howe No. 12108 "Over or Under" Indicator.

HOWE SCALES

(with or without Howe No. 8325 Balance Indicator)

—No. 54X Wood Pillar and Shelf Scale.

—No. 57 Steel Pillar and Shelf Scale (single beam).

—No. 57X Steel Pillar and Shelf Scale (double beam).

Features

- Completely self-contained with no electrical source or wiring required.
- Works hydraulically, like brakes on a car.
- Filling stops automatically when cylinders reach pre-set weight.
- Up to four stations can be handled by one individual.


How It Works

The scale beam weight is adjusted to the desired filled weight and the empty cylinder is placed on the scale. The loading hose is connected to the cylinder valve, and the lever on the master cylinder is moved to the vertical position. When the quick-acting valve on the loading hose is opened, the cylinder will rapidly fill. The master cylinder lever is designed to trip, move to a horizontal position and automatically shut off the control valve as soon as the scale reaches the pre-set filled weight.

Components may be ordered separately with piping done by the installer. Two completely assembled manifold configurations are also available.



Hydraulic self-contained system.
No external power required.

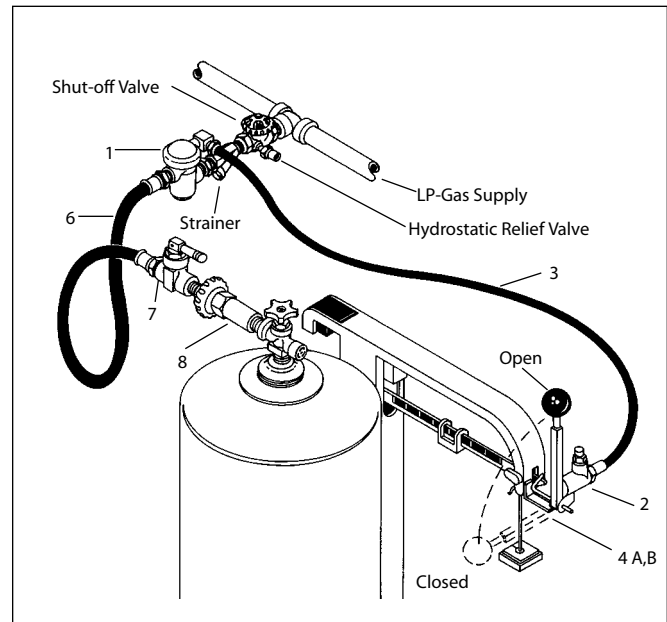

Ordering Information

Hydraulic System Components

Key No.	Description	Size	Part No.
Assembly for Fairbanks-Morse. Includes items 1 thru 8 below.			7194MD
Assembly for Howe. Includes items 1 thru 8			7194HD
1	Propane Control Valve	½" NPT Female, with ⅛" NPT Female Hydraulic Connection	7177
2	Master Cylinder, with Actuator Lever	⅝" NPT Hydraulic Connection	7188
3	Hydraulic Hose Assembly	⅜" I.D. with ⅝" NPT Male Ends, 43½" Overall Length	7194-1
1-3	Valve, Cylinder and Hose Assembly for Fairbanks-Morse Scales	-	7188MS
1-3	Valve, Cylinder and Hose Assembly for Howe Scales	-	7188HS
4A	Bracket Kit for Fairbanks Morse Scales, Complete with Screws, Washers, Nuts and Instructions	-	7194M-3A
4B	Bracket Kit for Howe Scales, Complete with Screws, Washers, Nuts and Instructions	-	7194H-3
5	Can of Hydraulic Fluid, Complete with Filling Spout	1½ ounce	7188-21
6	Propane Filling Hose Assembly	½" I.D., with ½" NPT Male Ends. 50½" Overall Length	7193D
7	Quick-acting Shut Off Valve	½" NPT Inlet X ¼" NPT Outlet	7901TB
8*	Soft Nose Cylinder Connector	¼" NPT Male X POL Male	7193D-10L